

Vape AC wiring as per instructions, wire direct with connectors don't bother using the spares and extra wiring that comes in the kit

Earth cdi, regulator/rectifier, back light to engine SIP 12 VOLT AC RECTIFIER SIP fixed curved CDI pt no SIO0046 LOOM IGNITION CUT OUT LOOM MAIN AC FEED


MB way... to bring the Vape AC inline with normal Lambretta colour coding - wire direct with connectors, don't bother using the spares and extra wiring that comes in the kit

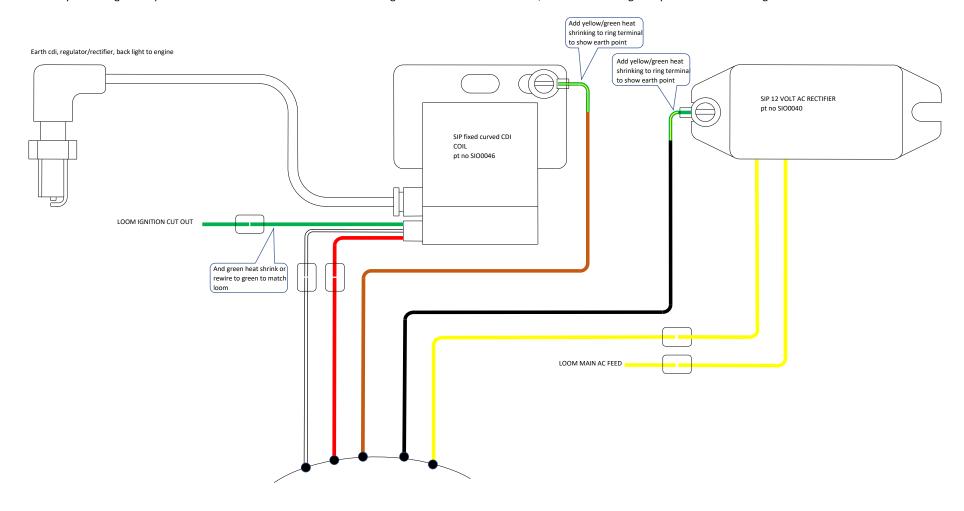


Vape DC wiring as per instructions, wire direct with connectors don't bother using the spares and extra wiring that comes in the kit

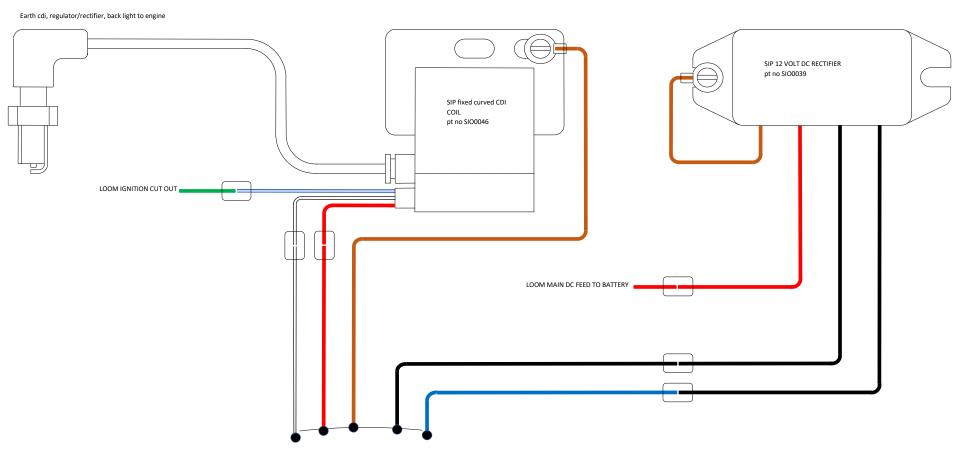

MB way... to bring the Vape DC inline with normal Lambretta colour coding - wire direct with connectors, don't bother using the spares and extra wiring that comes in the kit

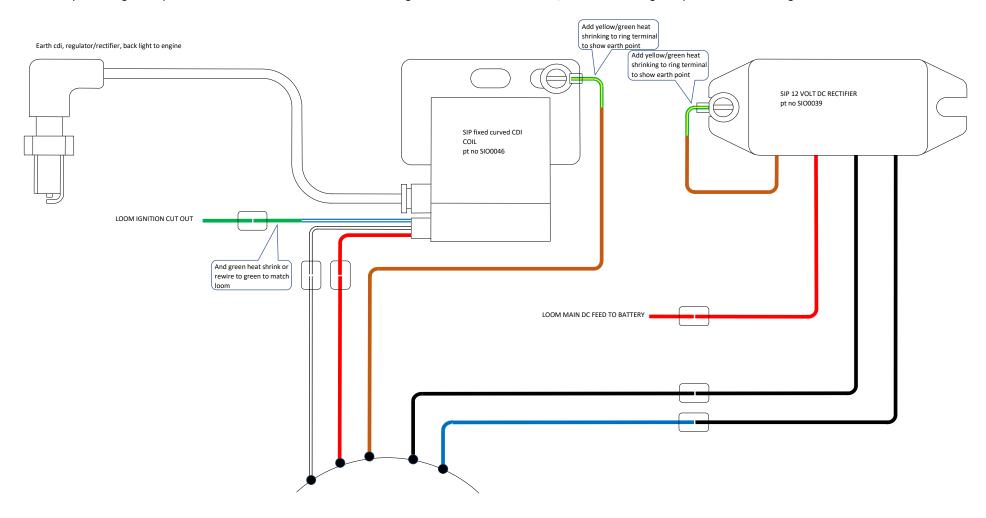

Vape AC with DC trickle charge wiring as per instructions, wire direct with connectors don't bother using the spares and extra wiring that comes in the kit

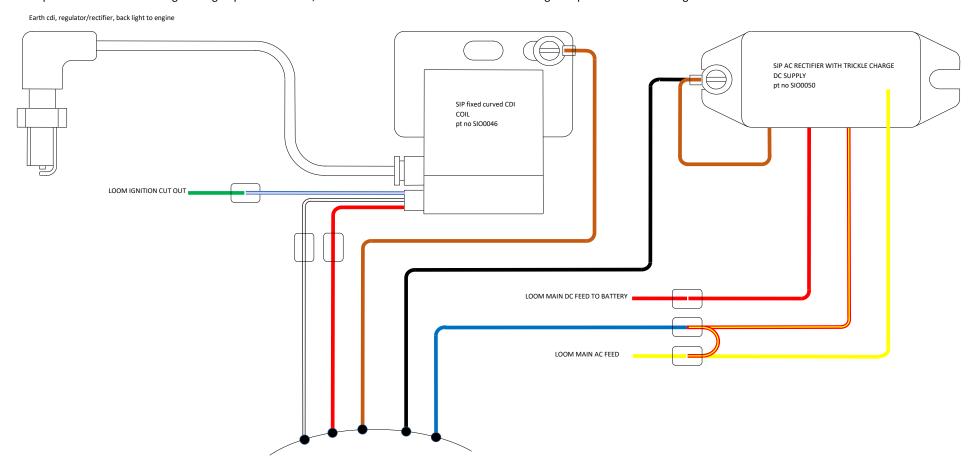

MB way... to bring the Vape AC with DC trickle charge inline with normal Lambretta colour coding - wire direct with connectors don't bother using the spares and extra wiring that comes in the kit

